

## 1. Using the Pelleteer

The Pelleteer was primarily designed to work with your wood stove, but it can be used in a variety of ways. It can also be used outdoors. Burn wood pellets or clean dry wood scraps. Fires are kept small, contained, manageable and safe.



When using the Pelleteer in your wood stove make sure to firmly position it towards the front of your stove to allow for easy loading and refueling. Use a standard hearth shovel or scoop to load the fuel basket with wood pellets. Some smaller pellets will fall through the basket when loading, which is normal, and will help in combustion.



When loading and refueling the Pelleteer with wood pellets, be sure to maintain a slanted top surface parallel with the bottom of the basket. This helps create an optimal draft for a hot and nearly smoke free fire.

Practical Goods LLC warrants The Pelleteer when used as intended, against physical defect that would compromise form, fit and/or function for one year after date of purchase.

## 2. Lighting the Pelleteer

Lighting wood pellets with the Pelleteer is easy, 100% reliable and almost effortless. Unlike a cord wood fire, a pellet fire lights from the top. Place starter block, Fatwood or starter gel inside front portion of basket, allowing flames to rise and spread over the incline of the pellet surface. Open draft so flames quickly spread and heat your stove.




After flames have covered entire top of pellet surface, the burn can be prolonged by regulating the draft of your wood stove just as you would with a cord wood fire. If pellets should smoke increase draft to allow more air into the stove to increase flames.

## 3. Refueling the Pelleteer

Refueling the Pelleteer is a little different than the initial lighting. After the burning pellets have become a thin bed of glowing embers of a couple of inches or so, drag them up to the front of the basket.

Now, fill the basket with pellets behind the burning embers. Let the pellet fuel cascade down the basket bottom and abut the embers at the front of the basket. Open the draft on your stove to allow enough air to bring the embers and new fuel to the point of combustion. Some smoking is normal, and can sometimes last several minutes before flames reappear. Be sure not to cover the top of the embers with pellets as this could cause undue smoldering.

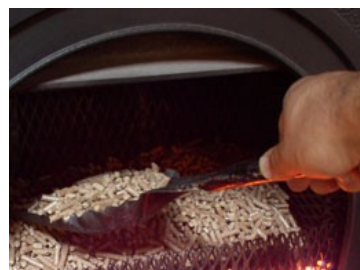

Now, fill the basket with pellets behind the burning embers. Let the pellet fuel cascade down the basket bottom and abut the embers at the front of the basket. Open the draft on your stove to allow enough air to bring the embers and new fuel to the point of combustion. Some smoking is normal, and can sometimes last several minutes before flames reappear. Be sure not to cover the top of the embers with pellets as this could cause undue smoldering.



If there are not enough embers to light pellets, simply add starter block or Fatwood. Adjust the draft on your wood stove to avoid smoking and over firing as you normally would with a cord wood fire.



